


# 2 Wire SRC Control - Non-Reversing External 24V DC Supply

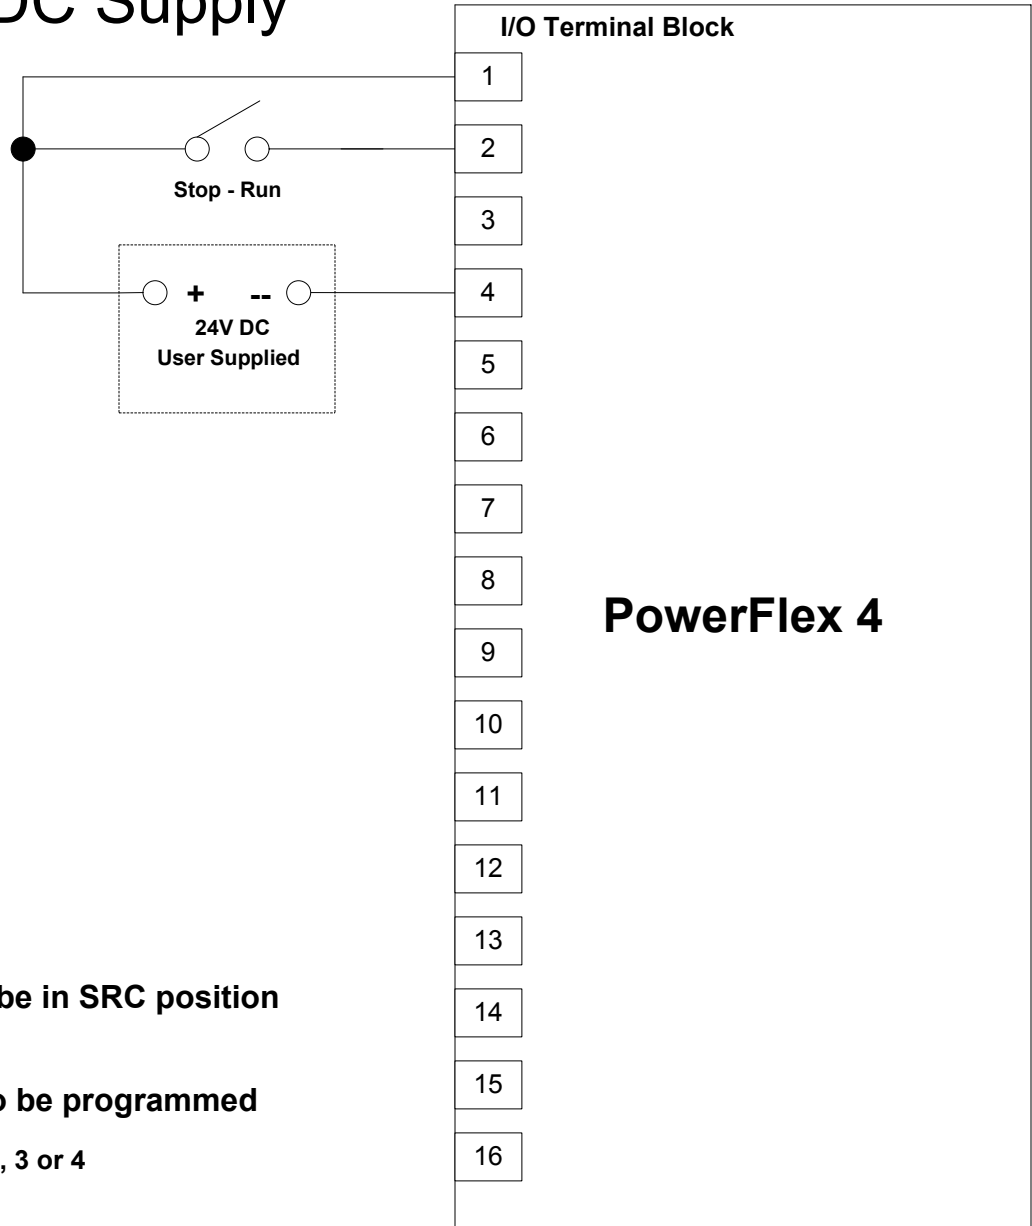

1) SNK/SRC Switch must be in SRC position

2) Parameters that need to be programmed

P036 (Start Source) = 2, 3 or 4

3) Input must be active for the drive to run.  
When input is opened, the drive will stop as  
specified by P037 (Stop Mode).