


2 Wire SRC Control - Run FWD/Run REV Internal Supply

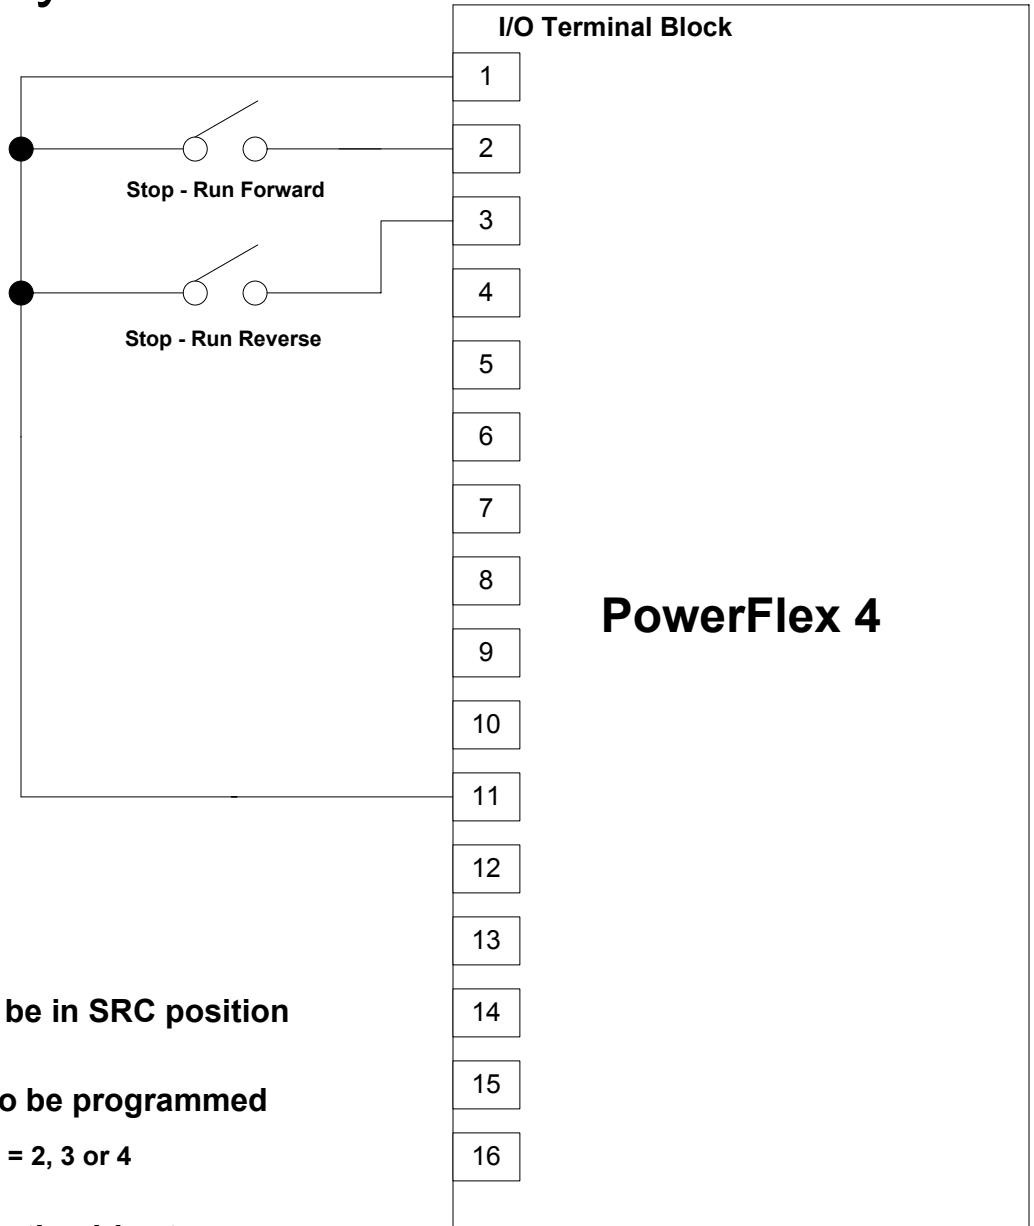

1) **SNK/SRC Switch must be in SRC position**

2) **Parameters that need to be programmed**

P036 (Start Source) = 2, 3 or 4

3) **Input must be active for the drive to run.**
When input is opened, the drive will stop as
specified by P037 (Stop Mode).

4) **If both Run Forward and Run Reverse**
inputs are closed at the same time, an
undetermined state could occur.