


2 Wire SNK Control Non Reversing

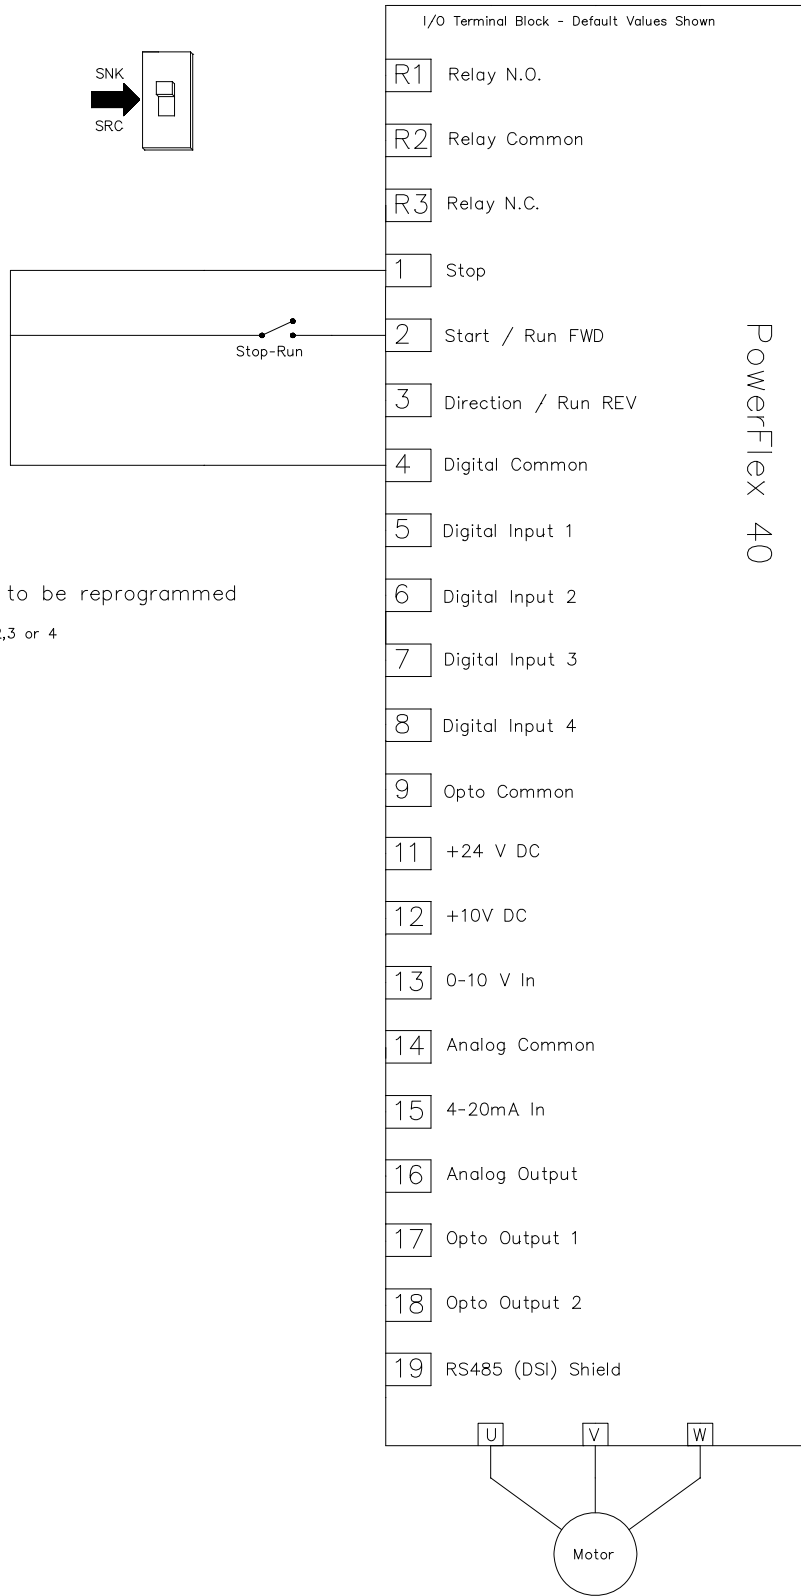

Parameters that need to be reprogrammed

P036 [Start Source] = 2,3 or 4