

2 Wire SRC Control Run FWD / Run REV - External Supply

Parameters that need to be reprogrammed

P036 [Start Source] = 2,3 or 4

Note: If both Run Forward and Run Reverse inputs are closed at the same time, an undetermined state could occur.

Note: Each Digital Input Draws 6mA

