

2 Wire SRC Control Non Reversing - Internal Supply

Parameters that need to be reprogrammed

P036 [Start Source] = 2,3 or 4

