

Opto Output 1 or 2

Parameters that need to be reprogrammed

A058 [Opto Out1 Sel] determines Opto-Output 1 (I/O Terminal 17) operation.

A061 [Opto Out2 Sel] determines Opto-Output 2 (I/O Terminal 18) operation.

When using Opto-Output with an inductive load such as a relay, install a recovery diode parallel to the relay as shown, to prevent damage to the output.

Note: Each Opto-Output is rated 30VDC 50mA (Non-Inductive)

