

Enabling Flying Start

File E / Utility

Goup - Drive Memory

196 (Param Access Lvl) = 1 (Advanced)

File C / Dynamic Control

Group / Restart Modes

169 (Flying Start En) = 1

170 (Flying Start Gain) = 4000 sets the response of the Flying Start.