



0-10 Volt Analog Output Representing Output Frequency of Drive

Parameters that need to be reprogrammed

File - Utility

Group - Drive Memory

196 (Param Access Lvl) = 1 (Advanced)

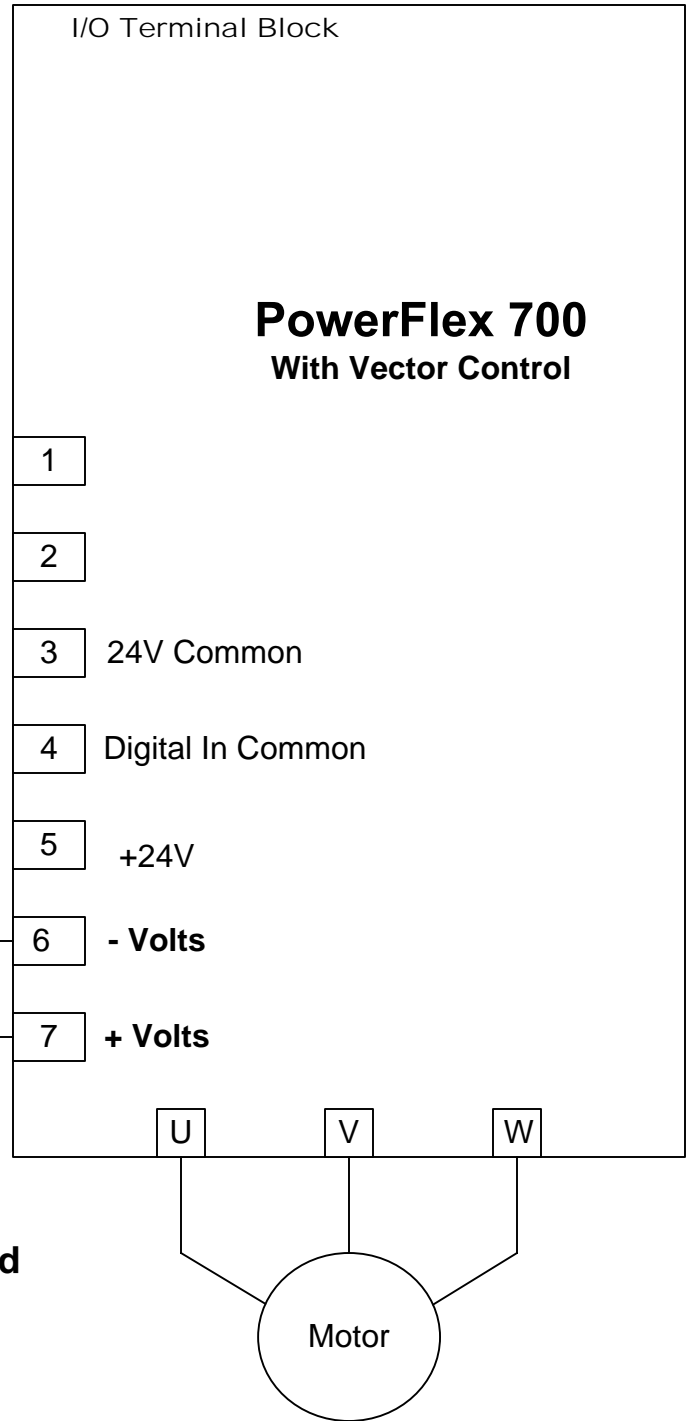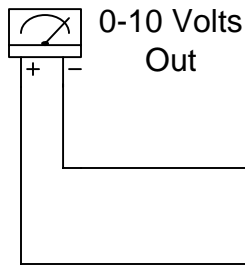

PowerFlex 700
With Vector Control

 

Parameters that need to be reprogrammed

File - Inputs & Outputs

Group - Analog Outputs

342 (Analog Out1 Sel1) = 0 (Output Freq)

341 (Anlg Out Absolut) = Nibble 1 = XXX0

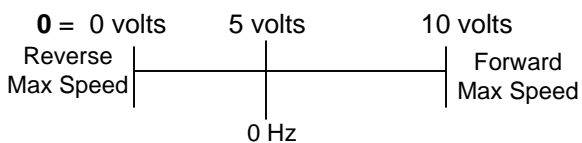

Note: Forward or Reverse

Parameter 341 (Anlg Out Absolut) Default 0 means Disabled

Disabled (0) = About 5 volts at 0Hz
About 0 volts at Max Speed Reverse
About 10 volts at Max Speed Forward

Enabled (1) = 0 to 10 volts Minimum to Maximum Speed for Forward or Reverse