

# Enabling Flying Start

## **File - Utility**

### **Group - Drive Memory**

196 (Param Access Lvl) = 1 (Advanced)

## **File - Dynamic Control**

### **Group / Restart Modes**

169 (Flying Start En) = 1

170 (Flying Start Gain) = 4000 sets the response of the Flying Start.