

Start and Control Speed from HIM

Program:

File - (Speed Command)

Group - Speed Reference

90 (Speed Reference) = 18

File - Digital Inputs

Group - Inputs & Outputs

361 (Digital In1 Sel) = 0

362 (Digital In2 Sel) = 0

363 (Digital In3 Sel) = 10

364 (Digital In4 Sel) = 15

365 (Digital In5 Sel) = 16

366 (Digital In6 Sel) = 17