

Torque Control – Reference Scale & Trim

* Note: Analog Hi, Lo scaling only used when Analog Input is selected

