



20-COMM-L LonWorks Adapter Firmware v1.007

This release note describes major revision 1, minor revision 7 of firmware for 20-COMM-L LonWorks adapters.

Important: If the 20-COMM-L adapter is firmware version 1.006 or earlier, it cannot be flash updated while installed in a PowerFlex 750-Series (PowerFlex 753 or PowerFlex 755) drive. First, install the 20-COMM-L in a PowerFlex 7-Class drive (PowerFlex 70, PowerFlex 700, PowerFlex 700H, etc.) and follow one of the flash update procedures in this document. Then, remove the 20-COMM-L (with firmware v1.007) from the PowerFlex 7-Class drive and install the adapter in the PowerFlex 750-Series drive.

Introduction

The following information is included in this document:

Topic	Page
Enhancements	1
Corrected Anomalies	1
Determining Firmware Revision	2
Firmware Flashing	4
Restrictions	7
Compatible Revisions	8
Rockwell Automation Support	8
Product Satisfaction Return	8

Enhancements

This section describes the enhancements provided in this revision of firmware.

- Added support for PowerFlex 750-Series drives (PowerFlex 753 and PowerFlex 755) **with the following limitations:**
 - Does not support Chinese, Japanese, and Korean languages.
 - Cannot access drive DPI port 7 or higher.
- Added support for PowerFlex 700VC drives.

Corrected Anomalies













This section describes the anomaly corrected in this revision of firmware.

- Corrected an improper bit setting of the XmitIOmsg variable that caused DataLinkIn B2 to work incorrectly.

Determining Firmware Revision

This section describes procedures to determine the firmware revision of your 20-COMM-L LonWorks adapter.

Using the LCD HIM


Step	Example Screens																																																																								
<ol style="list-style-type: none"> 1. In the Main Menu, press the  or  key to scroll to Device Select. 2. Press the  (Enter) key to enter this selection. 3. Press the  or  key to scroll to the 20-COMM-L adapter. 4. Press the  (Enter) key to display the adapter Main Menu. 5. In the adapter Main Menu, press the  or  key to scroll to Diagnostics. 6. Press the  (Enter) key to enter this selection. 7. Press the  or  key to scroll to Device Version. 8. Press the  (Enter) key to display the Product Data screen. 	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">F-></td> <td style="width: 40%;">Stopped</td> <td style="width: 40%;">Auto</td> </tr> <tr> <td colspan="3" style="text-align: center;">0.0 Hz</td> </tr> <tr> <td colspan="3">Main Menu:</td> </tr> <tr> <td colspan="3">Parameter</td> </tr> <tr> <td colspan="3" style="background-color: black; color: white;">Device Select</td> </tr> <tr> <td colspan="3">Memory Storage</td> </tr> </table> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">F-></td> <td style="width: 40%;">Stopped</td> <td style="width: 40%;">Auto</td> </tr> <tr> <td colspan="3" style="background-color: black; color: white;">Port 5: 20-COMM-L</td> </tr> <tr> <td colspan="3">Main Menu:</td> </tr> <tr> <td colspan="3" style="background-color: black; color: white;">Diagnostics</td> </tr> <tr> <td colspan="3">Parameter</td> </tr> <tr> <td colspan="3">Device Select</td> </tr> </table> </div> <div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">F-></td> <td style="width: 40%;">Stopped</td> <td style="width: 40%;">Auto</td> </tr> <tr> <td colspan="3" style="background-color: black; color: white;">Port 5: 20-COMM-L</td> </tr> <tr> <td colspan="3">Diagnostics:</td> </tr> <tr> <td colspan="3">Events</td> </tr> <tr> <td colspan="3">Device Items</td> </tr> <tr> <td colspan="3" style="background-color: black; color: white;">Device Version</td> </tr> </table> </div> <div style="border: 1px solid black; padding: 2px;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">F-></td> <td style="width: 40%;">Stopped</td> <td style="width: 40%;">Auto</td> </tr> <tr> <td colspan="3" style="background-color: black; color: white;">Port 5: 20-COMM-L</td> </tr> <tr> <td colspan="3" style="background-color: black; color: white;">▲Prev ▼Next</td> </tr> <tr> <td colspan="3" style="background-color: black; color: white;">20-COMM-L</td> </tr> <tr> <td colspan="3">FW: 1.006</td> </tr> <tr> <td colspan="3">HW: A Date: 3/24/2009</td> </tr> </table> </div>	F->	Stopped	Auto	0.0 Hz			Main Menu:			Parameter			Device Select			Memory Storage			F->	Stopped	Auto	Port 5: 20-COMM-L			Main Menu:			Diagnostics			Parameter			Device Select			F->	Stopped	Auto	Port 5: 20-COMM-L			Diagnostics:			Events			Device Items			Device Version			F->	Stopped	Auto	Port 5: 20-COMM-L			▲Prev ▼Next			20-COMM-L			FW: 1.006			HW: A Date: 3/24/2009		
F->	Stopped	Auto																																																																							
0.0 Hz																																																																									
Main Menu:																																																																									
Parameter																																																																									
Device Select																																																																									
Memory Storage																																																																									
F->	Stopped	Auto																																																																							
Port 5: 20-COMM-L																																																																									
Main Menu:																																																																									
Diagnostics																																																																									
Parameter																																																																									
Device Select																																																																									
F->	Stopped	Auto																																																																							
Port 5: 20-COMM-L																																																																									
Diagnostics:																																																																									
Events																																																																									
Device Items																																																																									
Device Version																																																																									
F->	Stopped	Auto																																																																							
Port 5: 20-COMM-L																																																																									
▲Prev ▼Next																																																																									
20-COMM-L																																																																									
FW: 1.006																																																																									
HW: A Date: 3/24/2009																																																																									

Using DriveExplorer Lite/Full

1. Launch DriveExplorer and go online (via 1203-USB or 1203-SSS converter) with the drive that is connected to the adapter.
2. In the DriveExplorer treeview, click on the 20-COMM-L LonWorks adapter as shown in [Figure 1](#).
3. Click the information icon to display the adapter's Properties screen.
4. The "Revision:" field shows the present revision (for example, 1.006) of the adapter firmware.

► **TIP:** When clicking on the 20-COMM-L adapter using version 5.01 or higher DriveExplorer Lite/Full, the adapter firmware revision is also shown in the right pane of the DriveExplorer window.


Figure 1 Information Icon in DriveExplorer Window

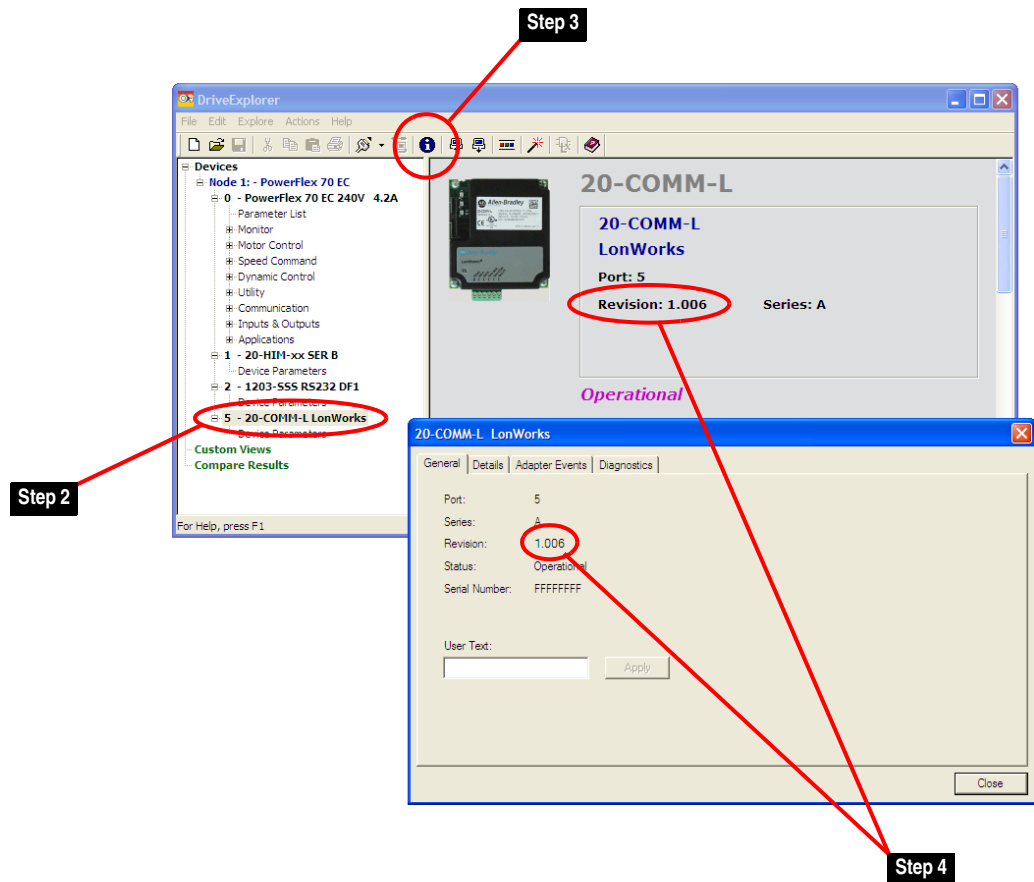

Using DriveExecutive

1. Launch DriveExecutive and go online (via 1203-USB or 1203-SSS converter) with the drive that is connected to the adapter.
2. In the DriveExecutive treeview, click on the 20-COMM-L adapter as shown in [Figure 2](#).
3. Click the information icon to display the adapter's Properties screen.
4. The "Revision:" field shows the present revision (for example, 1.006) of the adapter firmware.

Figure 2 Information Icon in DriveExecutive Window

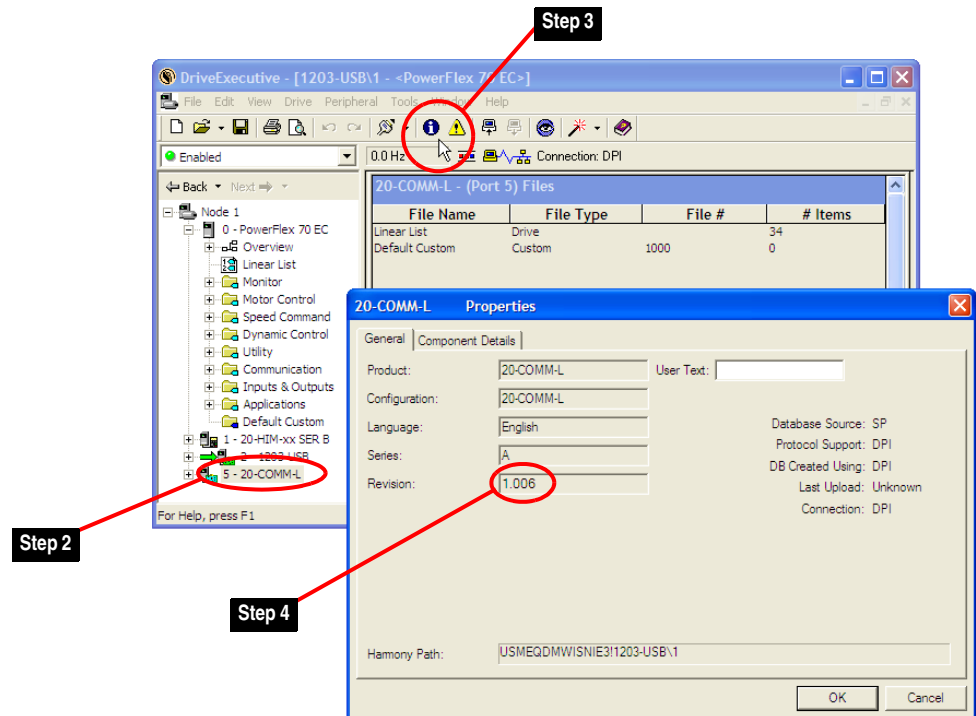

Firmware Flashing

This section describes procedures to flash update your adapter firmware. Flash kits for drives and communications adapters are provided on the Allen-Bradley Web Updates site located at <http://www.ab.com/support/abdrives/webupdate>. Flashing can be performed using a 1203-USB or 1203-SSS converter. For information about how to connect to your drive, please refer to the 1203-USB or 1203-SSS User Manual. They can be viewed/downloaded on the Literature Library web site located at www.literature.rockwellautomation.com.



ATTENTION: Risk of permanent equipment damage exists. Once a flash update has been started, do not remove power from the drive until after the download has completed and the adapter MOD status indicator starts FLASHING GREEN. If power is removed before this occurs, the adapter may be permanently damaged. An adapter that has been damaged in this way cannot be repaired.

Important: If the 20-COMM-L adapter is firmware version 1.006 or earlier, it cannot be flash updated while installed in a PowerFlex 750-Series (PowerFlex 753 or PowerFlex 755) drive. First, install the 20-COMM-L in a PowerFlex 7-Class drive (PowerFlex 70, PowerFlex 700, PowerFlex 700H, etc.) and follow one of the flash update procedures in this document. Then, remove the 20-COMM-L (with firmware v1.007) from the PowerFlex 7-Class drive and install the adapter in the PowerFlex 750-Series drive.

Installing the Flash Kit

1. Go to the Allen-Bradley Web Updates site at <http://www.ab.com/support/abdrives/webupdate> and install the flash kit for the 20-COMM-L adapter. (This also automatically installs the ControlFLASH software on your computer.)
2. You are now ready to use DriveExplorer, DriveExecutive, ControlFLASH or HyperTerminal to update the adapter. Refer to the respective section below and follow the instructions.

Using DriveExplorer Lite/Full to Flash Update

1. With the Flash Kit installed (see [Installing the Flash Kit](#)), launch DriveExplorer and go online (via a 1203-USB or 1203-SSS converter) with the drive that is connected to the adapter.
2. In the DriveExplorer treeview, click on the 20-COMM-L adapter. Then click the information icon as shown in [Figure 1](#) to display the adapter's Properties screen.
3. On the 20-COMM-L Properties screen, click the Details tab.

Important: This update may cause the adapter parameters to revert to their default values. You may want to save your configuration using DriveExplorer or the HIM CopyCat feature before updating.

4. To start the flash update, click the **Flash Update...** button. Then select "1.007.xx" from the list of available updates and click **Next >**. Follow the remaining screen prompts until the flash update procedure completes and displays the new firmware revision (v1.007).

Using DriveExecutive to Flash Update

1. With the Flash Kit installed (see [Installing the Flash Kit](#)), launch DriveExecutive and go online (via a 1203-USB or 1203-SSS converter) with the drive that is connected to the adapter.
2. In the DriveExecutive treeview, click on the 20-COMM-L adapter. Then click the information icon as shown in [Figure 2](#) to display the adapter's Properties screen.

3. On the 20-COMM-L Properties screen, click the Component Details tab.

Important: This update may cause the adapter parameters to revert to their default values. You may want to save your configuration using DriveExecutive or the HIM CopyCat feature before updating.

4. To start the flash update, click the **Flash Update** button. Then select the 20-COMM-L from the list of available devices and click **Next >**.
5. Select “1.007.xx” from the list of available updates and click **Next >**. Follow the remaining screen prompts until the flash update procedure completes and displays the new firmware revision (v1.007).

Using ControlFLASH to Flash Update

1. With the Flash Kit installed (see [Installing the Flash Kit on page 5](#)), launch ControlFLASH by selecting **Start > (All) Programs > Flash Programming Tools > ControlFLASH**.
2. On the ControlFLASH Welcome screen, click **Next >**.
3. Choose the appropriate 20-COMM-L update from the list of available updates and click **Next >**.

Important: This update may cause the adapter parameters to revert to their default values. You may want to save your configuration using the HIM CopyCat feature, DriveExplorer or DriveExecutive before updating.

4. Expand the treeview for the communication path you are using, and select the icon that represents the drive with the 20-COMM-L adapter you are updating. Then click **OK**.
5. With the Multiple Assemblies Found window displayed, select “Port X - 20-COMM-L” from the list and click **OK**.
6. With the Firmware Revision window displayed, select “1.007.xx” from the list of available updates and click **Next >**. Follow the remaining screen prompts until the flash procedure completes and displays the new firmware revision (v1.007).

Using HyperTerminal to Flash Update

1. With the Flash Kit installed (see [Installing the Flash Kit on page 5](#)), launch HyperTerminal and go online (via 1203-USB or 1203-SSS converter) with the powered drive that is connected to the adapter.
2. Press the **Enter** key until the main menu ([Figure 3](#)) appears.

Figure 3 Main Menu

```
Main Menu - Enter Number for Selection
1> Display Setup Parameters
2> Display Event Queue
3> Flash Upgrade
```

3. In the main menu, press **3** to flash upgrade. Then press the number key that corresponds to the “20-COMM-L” in the list, and press **Y** (for Yes) to update the flash code. The terminal program will start displaying the letter “C.” This signals the XMODEM protocol that the download may proceed. You then have one minute to start the transfer.




ATTENTION: Risk of injury or equipment damage exists. When you perform a flash update, the drive will fault if it is receiving control I/O from the adapter. Verify that the drive has stopped safely or is receiving control I/O from an alternate source before beginning a flash update.

4. Select **Transfer > Send File** to display the Send File screen ([Figure 4](#)).
5. Click **Browse** and navigate to the flash file located in:

C:\Program Files\ControlFLASH\0001\0078\1700

Figure 4 Send File Screen

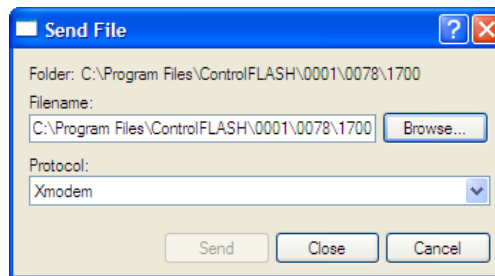

6. In the Select File to Send window list, click on the “20-COMM-L_1_007_01_AppNewHdr.bin” file. Then click **Open**. This file name now appears in the Filename box in the Send File screen.
7. In the Protocol box, select “Xmodem.”
8. Click **Send**. A dialog box appears and reports the progress of the update. When it is complete, the message “Flash Complete” appears. Press any key to continue.

Important: Keep the device powered for 15 seconds after the operation has completed or until the adapter MOD status indicator starts flashing green.



TIP: To cancel the flash update at any time, press **CTRL-X**.

9. Repeat steps 2 through 8 for the “20-COMM-L_1_007_01_CombNewHdr.bin” file.
10. Press the **Enter** key to return to the main menu.

Restrictions

No restrictions apply to this revision of firmware.

Compatible Revisions

To use this revision of firmware, update your system tools as follows:

Update this...	To this version...
DriveExplorer Lite/Full	4.01 or later
DriveExecutive	3.01 or later
PowerFlex 7-Class Drive	all versions compatible
LCD HIM	all versions compatible
RSLinx Classic	2.43 or later

Rockwell Automation Support

Rockwell Automation provides technical information on the web to assist you in using our products. At <http://support.rockwellautomation.com>, you can find technical manuals, a knowledge base of Frequently Asked Questions (FAQs), technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

Rockwell Automation also provides complimentary phone support for drives, communication adapters, and peripherals. If you experience a problem with the adapter, please review the information in its User Manual. For further help in getting your adapter operational, contact a Customer Support representative:

United States	(1) 262.512.8176 Monday – Friday, 7am – 6pm CST
Outside United States	Please contact your local Rockwell Automation representative for any technical support issues.

For an additional level of technical phone support for installation, configuration and troubleshooting, we offer TechConnect Support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://support.rockwellautomation.com>.

Product Satisfaction Return

Rockwell Automation tests all products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned:

United States	Contact your distributor. You must provide a Customer Support case number (see phone number above to obtain one) to your distributor to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for return procedure.

U.S. Allen-Bradley Drives Technical Support - Tel: (1) 262.512.8176, Fax: (1) 262.512.2222, Email: support@drives.ra.rockwell.com, Online: www.ab.com/support/abdrives

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846